

FTT Mass Loss Cone Spare Parts List

<i>Part No</i>	<i>Part type</i>	<i>Part Name</i>	<i>Notes</i>
FTT030	Burner	1 - 2 mm burner gravel (1 kg bag)	Price per 1 kg
M073-4	Burner	Sand box calibration burner assembly	Including gravel and ceramic fibre layers
HFM Recal	Calibration	Calibration of heat fluxmeter	Original to be returned to FTT
C209-4	Ceramic	Load cell cover	Rectangular cover with slot
U199-4	Ceramic	Shutter Pad - Set of 2 (L/H & R/H)	
FTT0156	Controller	Eurotherm Temperature controller for Cone Calorimeter	
FTT0154	Flow control	Flashback arrestor assembly	With 8 mm hose nipple on each
U186-4	Gauge	23 mm spacing gauge (cone to sample)	Use for sample holder with edge frame
U187-4	Gauge	25 mm spacing gauge (cone to heat flux meter or sample)	Use to position heat flux meter at correct height or sample with no edge frame
FTT0012	Heat Flux Meter	S/A Heat flux meter assembly	
U135	Heater	Heater element winding	
U149	Heater	Cone heater assembly and thermocouples	
U216	Heater	Cone winding termination kit (ring terminal, sleeve and Autostic)	set of 2 (ring + pyrex sleeve + Autostic)
4473	Load cell	Load cell controller	
FTT0013	Sample	S/A Sample holder assembly (tray and edge frame)	
U197	Sample	Ceramic fibre backing pads (4 pieces)	100 x 100 x 25 mm (4 per pack)
4732	Spark	Continuous spark generator	Replaces 4084
4397	Spark	10 kV spark generator unit	Intermittent spark, no detection
M015-4	Spark	2.5 mm electrode assembly with Tufnol block	
U215-4	Support	Dual height fluxmeter/burner holder	Bracket for side of cone heater to allow heat flux meter to be positioned at 25 or 60 mm from the bottom of the heater
GBH4615	Thermocouple	1.5 mm thermocouple olive	
GBH4822	Thermocouple	Thermocouple for stack	